



USER ARTICLE

ADJUSTING THE POWER ARM

CAM



Version 2026.1

SCOTTSDALE

THE TRUSTED STEEL-FRAMING PARTNER

ADJUSTING THE POWER ARM CAM



Step 1

Loosen lock nut.



Step 2

Loosen m6 bolt holding cam.



Step 3

Rotate cam until pushing on microswitch wheel. Lock M6 bolt and lock nut in position.

NOTE Once adjusted, the Swing/Activating arm should go from nearly horizontal to nearly touching the ground